

# INSTRUMENT PANEL SYSTEMS


## TABLE OF CONTENTS

	page	page
REMOVAL AND INSTALLATION		
HEADLAMP LEVELING SWITCH. ....	1	
REAR FOG LAMP SWITCH. ....		1

## REMOVAL AND INSTALLATION

### HEADLAMP LEVELING SWITCH

#### REMOVAL

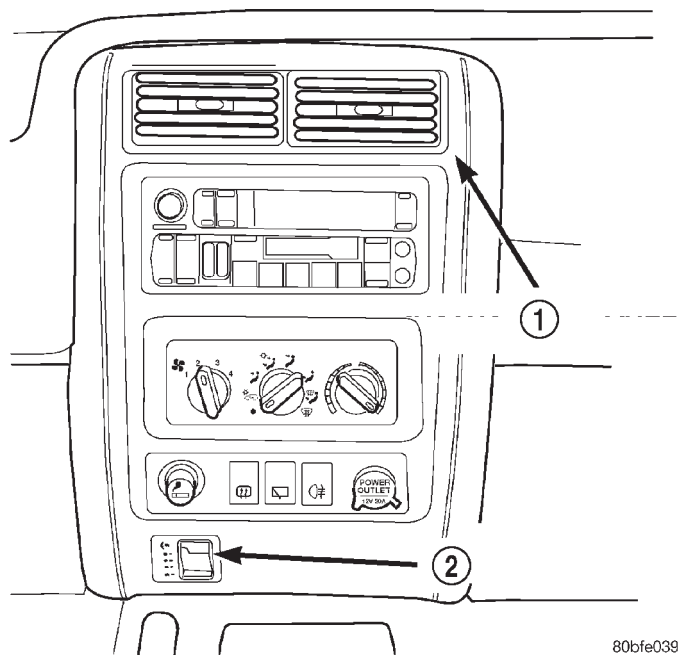

**Fig. 1 Headlamp Leveling Switch Position & Orientation**

- 1 – INSTRUMENT PANEL CENTER BEZEL
- 2 – HEADLAMP LEVELING SWITCH

- (1) Disconnect and isolate the negative battery cable.
- (2) Using a trim stick or another suitable wide flat-bladed tool, gently pry the instrument panel center bezel away from the instrument panel to release the four snap clip retainers (Fig. 1).
- (3) Pull the center bezel away from the instrument panel far enough to disconnect the wiring harness from the headlamp leveling switch.
- (4) Depress the switch retaining tabs to remove the switch from the center bezel.

#### INSTALLATION


- (1) Install the instrument panel center bezel on the I. P. Be certain headlamp leveling switch electrical harness is inserted through the hole in center bezel.
- (2) Connect the headlamp leveling switch electrical.
- (3) Verify switch / system operation.
- (4) Install the headlamp leveling switch in the instrument panel center bezel by gently pushing straight in.
- (5) Connect the negative battery cable.

### REAR FOG LAMP SWITCH

**WARNING: ON VEHICLES EQUIPPED WITH AIR-BAGS, REFER TO GROUP 8M - PASSIVE RESTRAINT SYSTEMS BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIR-BAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.**

- (1) Disconnect and isolate the battery negative cable.
- (2) Using a trim stick or another suitable wide flat-bladed tool, gently pry the instrument panel center bezel away from the instrument panel to release the six snap clip retainers.
- (3) Remove the center bezel from the vehicle.
- (4) Remove the three screws that secure the accessory switch bezel to the instrument panel
- (5) Pull the accessory switch bezel out from the instrument panel far enough to unplug the wire harness connectors (Fig. 2).
- (6) Remove the accessory switch bezel from the instrument panel.
- (7) Carefully pry the snap retainers at the top and bottom of the rear fog lamp switch receptacle on the back of the accessory switch bezel with a small thin-bladed screwdriver and pull the switch out of the receptacle.

## REMOVAL AND INSTALLATION (Continued)

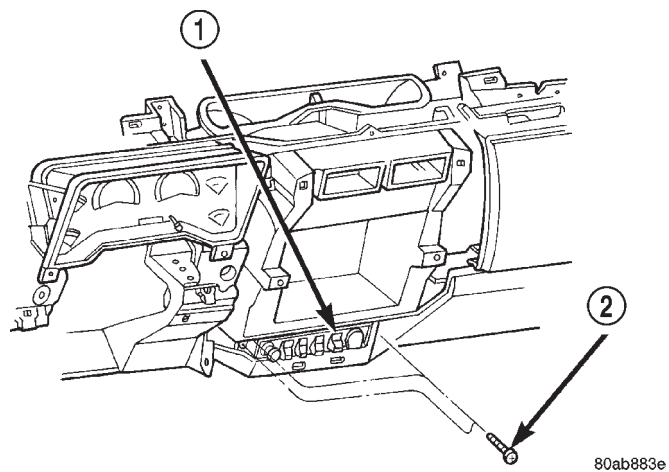

receptacle on the back of the accessory switch bezel are fully engaged. Tighten the mounting screws to 2.2 N·m (20 in. lbs.).

**Fig. 2 Accessory Switch Bezel Remove/Install**

- 1 - ACCESSORY SWITCH BEZEL  
2 - SCREW

(8) Reverse the removal procedures to install. Be certain that both of the switch snap retainers in the